

ET22377A02 Datasheet v1.0

Revision History

Date	Version	Description	Reviewer
Jan. 2023	V 1.0	First Release	Jason Du

Contact us:

Web: http://www.ecotron.ai

Email: info@ecotron.ai

support@ecotron.ai

Address: 13115 Barton Rd, STE H

Whittier, CA, 90605

United States

Tel: +1 562-758-3039

+1 562-713-1105

Table of Contents

1.	Gener	al Information	2
1.	1 INTRO	ODUCTION	2
	1.1.1	Terminology	2
	1.1.2	Functionality	3
	1.1.3	Mechanical	3
	1.1.4	Harness Connector	5
	1.1.5	Chip Information	6
	1.1.6	Power Supply	6
	1.1.7	Bootloader	7
2.	Interfa	ace Description	8
2.	1 PIN [DEFINITION	8
2.:	2 PIN E	DESCRIPTION	10
	2.2.1 A	nalog Signal Input	10
	2.2.2 D	igital Signal Input	12
	2.2.3 Fr	requency Signal Input	13
	2.2.4 H	igh-side Driver	15
	2.2.5 C	AN Bus	16
	2.2.6 5	V Output	17
	2.2.7 H	-bridge	17
	2.2.8 EE	EPROM	20
3.	Techn	ical Performance	21
3.	1 ELEC	TRICAL CHARACTERISTICS	21
3.3	2 ELEC	TRICAL PERFORMANCE STANDARD	22
3.	3 Envi	RONMENTAL STANDARDS	23
3.4	4 EMC	TEST STANDARD	24
3.	5 Al di	AGNOSIS	24
4.	Install	ation Requirements	25

1. General Information

1.1 Introduction

Transmission Control Unit (TCU) is designed for EV/HEV transmission control.

As one of the main control units of the CAN bus-based vehicle control network, TCU controls vehicle transmission shifting based on the user-defined transmission control strategy, vehicle driving modes, driver behaviors, etc.

During the whole vehicle driving process, TCU determines the best gear change time based on the vehicle speed and throttle opening data, and coordinates to control motor or motor torque to ensure a smooth gear shifting, improving the economy and comfort of the whole vehicle.

1.1.1 Terminology

The following table lists the abbreviations and definitions of terms in the document.

Table 1.1.1.1 Terminology

	14.0.0 = 1.1.1.1 1.0.1.1.1.1.0.0
Terminology Abbreviation	Definition
TCU	Transmission Control Unit
Keyon	Key Switch Signal
CAN	CAN Bus

1.1.2 Functionality

ET22377A02 has the following functions:


Table 1.1.2.1 ET22377A02 Features

Feature
1 Key Switch (KEYON)
2 Power Supply (BATT)
2 H-Bridge Power Supply (BATT_MOTOR)
2 H-Bridge Outputs
2 5V Outputs (2 more channels are add-able)
3 CAN Bus Ports: Support CAN flashing. CAN_A supports
arbitrary frame wake-up
8 Analog Signal Inputs
8 Digital Signal Inputs
4 Frequency Signal Inputs
6 High-Side Driver Outputs: 4 channels are Configurable as
PWM Output
Hardware Watchdog
Gyroscope (Optional)

1.1.3 Mechanical

The housing of TCU is formed by aluminum die-casting and assembled with silicone rubber. There is no special treatment or plating on the outside of the shell, no sharp burrs or edges.

The nominal dimensions of the TCU housing are as follows (excluding the female end of the TCU connector, in mm):



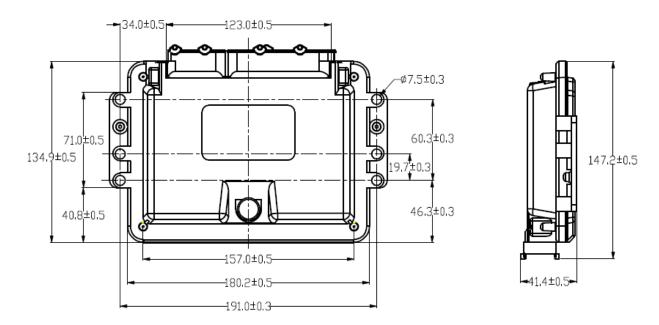


Figure 1 TCU Housing Size

The appearance of the shell is as follows:



Figure 2 TCU Housing Appearance

Copyright ECOTRON CORPORATION

All Rights Reserved

The socket model used for disassembling the shell: Torx T15.

The product identification label is affixed to the TCU housing, which contains the product identification code, customer information, date, batch number, serial number, etc.

1.1.4 Harness Connector

TCU uses the world-renowned "TE connectivity" brand connector, which is a qualified product that meets the automotive safety level with 121 pins. The specific models of the connectors are as follows.

Table 1.1.4.1 Harness Connector Info

#	Name	Part number	Supplier	URL			
#	INATTIE	Part Humber	Suppliel				
1	PCB Pin Seat	1746979-1	TE	https://www.te.com/usa-en/product-1746979-			
_	rebriii Seat	1740373-1	I L	1.html			
2	81P Housing	1473244-1	TE	https://www.te.com/usa-en/product-1473244-			
	or nousing	1473244-1	16	1.html			
3	40P Housing	1473252-1	TE	https://www.te.com/usa-en/product-1473252-			
3	40F Housing	14/3232-1	16	1.html			
4	81P Cover	1473247-1	TE	https://www.te.com/usa-en/product-1473247-			
4	Assembly	14/324/-1	16	1.html			
5	40P Cover	1473255-1	TE	https://www.te.com/usa-en/product-1473255-			
3	Assembly	1473233-1	16	1.html			
6	81P TPA	368382-1	TE	https://www.te.com/usa-en/product-368382-1.html			
7	40P TPA	368388-1	TE	https://www.te.com/usa-en/product-368388-1.html			
	Terminal (Wire			1-44/			
8	diameter 0.2-	5-968220-1	TE	https://www.te.com.cn/chn-zh/product-5-968220- 1.html			
	0.35)			1.110111			
	Terminal (Wire						
9	diameter 0.75-	964286-2	TE	https://www.te.com.cn/chn-zh/product-964286-2.html			
	1.0)						

Harness connectors are shown below:

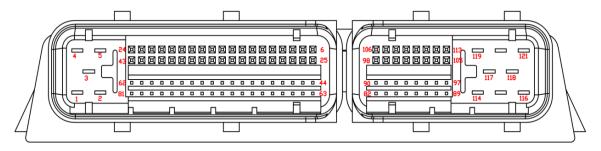


Figure 3 Harness Connector and Pin Distribution Diagram

1.1.5 Chip Information

Table 1.1.5.1 Chip Info

Feature	Detail
Micro Control Core	32-bit SAK-TC377TP-96F300S AA
Maximum Frequency	300MHz
Flash	6M
SRAM	1.1M
Floating Point Capability	Yes
SPI	50Mbit/s
IIC	20Mbit/s
CAN	1Mbit/s

1.1.6 Power Supply

ET22377A02 requires 2 continuous power supplies (pin1 and pin3) and is powered on through the key switch (pin93).

TC377 communicates with SBC through SPI communication at the rate of 10Mbps.

A 5A fuse in series with pin1 and pin3 is recommended for ET22377A02 power supply.

ET22377A02 power-on sequence diagram:

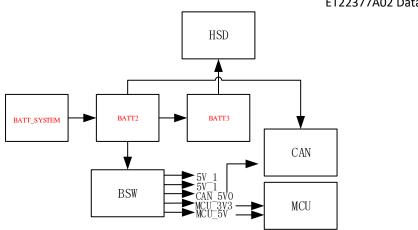


Figure 4 Power-on Sequence

1.1.7 Bootloader

The default Bootloader protocol is UDS.

2. Interface Description

2.1 Pin Definition

Table 2.1.1 Pin Definition

Table 2.1.1 Pin Definition									
Signal	PIN	Function	Description	Note					
			Power						
BATT_SYSTEM	1 3	Power Supply	12V/24V	9-32V					
BATT_MOTOR	116 121	Power Supply	H-Bridge Power Supply	9-32V					
5V1	25 46	5V Sensor Supply 1	FMS	Single channel outputs 5V±1%, 2 channels sum maximum 150mA					
5V2	26 47	5V Sensor Supply 2	5V Sensor Power Supply	Single channel outputs 5V±1%, 2 channels sum maximum 150mA					
GND	2 4 5	Power Ground	Power Supply Ground						
GND	114 115	Power Ground	H-Bridge Power Ground						
GND	17 18 19 20 55 56 57 58 63 64 65 66 67 68 69 70 98 99 100 101 102 103 104 105	Signal Ground	5V Sensor Ground Signal Ground						
		Ai	nalog Input						
AlO1	9	Analog Input 01	Analog Signal Input 0~5V	Resistance Type, 12bit					

ET22377A02 Datasheet_V1.0

				E1223//AU2 Datasheet_v1.0
AIO2	10	Analog Input 02	Analog Signal Input 0~5V	Resistance Type, 12bit
AI03	11	Analog Input 03	Analog Signal Input 0~5V	Resistance Type, 12bit
AI04	12	Analog Input 04	Analog Signal Input 0~5V	Resistance Type, 12bit
AI05	13	Analog Input 05	Analog Signal Input 0~5V	Resistance Type, 12bit
AI06	14	Analog Input 06	Analog Signal Input 0~5V	Resistance Type, 12bit
AI07	15	Analog Input 07	Analog Signal Input 0~5V	Resistance Type, 12bit
AI08	16	Analog Input 08	Analog Signal Input 0~5V	Resistance Type, 12bit
		Pow	ver-on signal	
KEYON	93	Key Input Signal	Analog Signal Input 0~BATT	12bit, Wake Up threshold voltage > 9V
		Di	igital Input	
DI01	94	Analog Input 01	Digital Signal Input 0~BATT	Active Low
DI02	95	Analog Input 02	Digital Signal Input 0~BATT	Active Low
DI03	30	Analog Input 03	Digital Signal Input 0~BATT	Active High
DI04	31	Analog Input 04	Digital Signal Input 0~BATT	Active High
DI05	32	Analog Input 05	Digital Signal Input 0~BATT	Active Low
DI06	33	Analog Input 06	Digital Signal Input 0~BATT	Active Low
DI07	34	Analog Input 07	Digital Signal Input 0~BATT	Active Low
DI08	35	Analog Input 08	Digital Signal Input 0~BATT	Active Low
		Fred	quency Input	•
SPEED1	36	Frequency Input 1	Frequency Signal Input	Frequency Input Range 1Hz-30kHz
SPEED2	37	Frequency Input 2	Frequency Signal Input	Frequency Input Range 1Hz-30kHz
SPEED3	38	Frequency Input 3	Frequency Signal Input	Frequency Input Range 1Hz-30kHz
SPEED4	39	Frequency Input 4	Frequency Signal Input	Frequency Input Range 1Hz-30kHz
		Ou	tput Signal	•
HS01	62 81	High-side Output 01	Rated 3A, Max 10A	
HS02	24 43	High-side Output 02	Rated 3A, Max 10A	
HS03	23	High-side Output 03	Rated 1A, Max 2A	Support PWM Output, Frequency Range 1Hz-2KHz
HS04	22	High-side Output 04	Rated 1A, Max 2A	Support PWM Output, Frequency Range 1Hz-2KHz
HS05	60	High-side Output 05	Rated 1A, Max 2A	Support PWM Output, Frequency Range 1Hz-2KHz
HS06	61	High-side Output 06	Rated 1A, Max 2A	Support PWM Output, Frequency Range 1Hz-2KHz
H1	120 118	H1_A H1_B	Rated 10A, Max 20A	
H2	119	H2_A	Rated 10A, Max 20A	

Copyright ECOTRON CORPORATION

All Rights Reserved

ET22377A02 Datasheet V1.0

	_		_	LIZZS////OZ Batasiicct_vi.
	117	H2_B		
		Serial	Communication	
S_CAN_H	82	CANA_H	1200hm Terminating Resistor	Support CAN flashing
S_CAN_L	83	CANA_L	Included	Support CAN hashing
P_CAN_H	6 85	CANB_H	1200hm Terminating Resistor	Support CAN flashing
P_CAN_L	7 86	CANB_L	Included	Support CAN Hashing
D_CAN_H	88	CANC_H	1200hm Terminating Resistor	Support CAN flashing
D_CAN_L	89	CANC_L	Included	Support CAN hashing
		Int	ernal Signal	
BATT_MOTOR(AI09)		Collect H-Bridge BATT_MOTOR Voltage		12bit accuracy
BATT_SYSTEM(AI10)		Collect Power Supply BATT_SYSTEM Voltage		12bit accuracy

2.2 Pin Description

2.2.1 Analog Signal Input

Description

The analog input channel circuit has the same structure, including EMC capacitors, pull-up/pull-down resistors and a first-order low-pass filter circuit.

ADC Value/4095*5*Gain=Vin, gain for AI01-AI08 is 1.

Main differences:

- Resistance of pull-up/pull-down resistor
- Pull-up voltage

Schematic

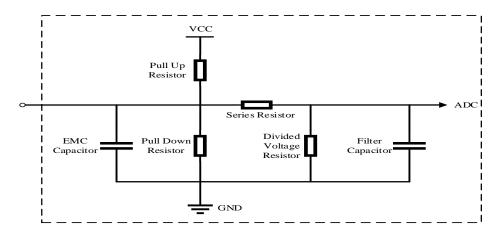


Figure 5 Schematic of Analog Input Channel

Table 2.2.1.1 Analog Input Channel Parameters Note: 1) "--" =Unassembled. 2) U_B =BATT Voltage. 3) KEYON is only used for switch signal.

Pin#	Pin# AI		Pull U _I	Resistor	Pull down Resistor	Series Resistor	Divided Voltage Resistor	Filter Capacitor		ration nge	Input	Range	Rate	Conditions / Remarks
		(F)	to U _B (Ohm)	to 5V (Ohm)	to GND (Ohm)	(Ohm)	(Ohm)	(F)	V_{low}	V_{high}	Min	Max		
9	AI01	100n		2K		68K		1n	0V	5V	0V	5V	1	
10	AI02	100n		2K		68K		1n	0V	5V	0V	5V	1	
11	AI03	100n		2K		68K		1n	0V	5V	0V	5V	1	
12	AI04	100n		2K		68K		1n	0V	5V	0V	5V	1	
13	AI05	100n		10K		68K		1n	0V	5V	0V	5V	1	
14	AI06	100n		10K		68K		1n	0V	5V	0V	5V	1	
15	AI07	100n		10K		68K		1n	0V	5V	0V	5V	1	
16	AI08	100n		10K		68K		1n	0V	5V	0V	5V	1	
121	BATT_MOT OR	100n			-1	99.8K	16K	1n	0V	32V	0V	32V	7.24375	
1 3	BATT_SYST EM	100n		1	1	99.8K	16K	1n	0V	32V	0V	32V	7.24375	
93	KEYON/AI27	100n				99.8K	16K	1n	0V	32V	0V	32V	7.24375	
25 46	5V_1	100n			-1	22K	22K	1n	0V	5V	0V	5V	2	
26 47	5V_2	100n		1	-	22K	22K	1n	0V	5V	0V	5V	2	
	VCC	100n		1	1	22K	22K	1n	0V	5V	0V	5V	2	
	CAN_5V0	100n		1	1	22K	22K	1n	0V	5V	0V	5V	2	
	MCU_3V3	100n				22K	22K	1n	0V	5V	0V	5V	2	
	MCU_5V	100n				22K	22K	1n	0V	5V	0V	5V	2	
	BATT3					99.8K	16K	1n	0V	32V	0V	32V	7.24375	
	ID1			10K			2.2K	1n	0V	5V	0V	5V	1	
	ID2			10K			2.2K	1n	0V	5V	0V	5V	1	

2.2.2 Digital Signal Input

Description

The digital input channel circuit has the same structure, including EMC capacitors, pull-up/pull-down resistors, voltage divider resistors, and a first-order low-pass filter.

Main differences:

- Resistance of pull-up/pull-down resistor
- Pull-up/pull-down selection

Schematic

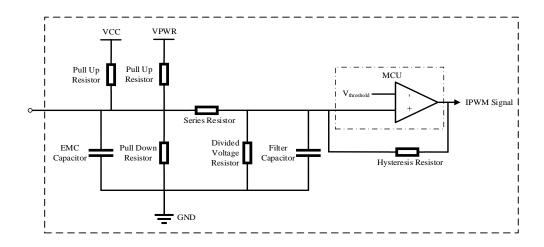


Figure 6 Schematic of Digital Input Channel

Table 2.2.2.1 Digital Input Channel Parameter Note: 1) "--" =Unassembled. 2) U_B =BATT Voltage. 3)KEYON, WAKE2, WAKE3 are only used for wake-up signal.

DI#	EMC Cap.	Filter Cap.	Pull Up Resistor to UB	Pull Up Resistor to 5V		Serial Resistor	Divided Voltage Resistor	Operation Threshold for Input Signal		Threshold		Inpu	it Range	Conditions/ Remarks
	(F)	(F)	(Ohm)	(Ohm)	(Ohm)	(Ohm)	(Ohm)	Vlow	Vhigh	min	max			
DI01	1n	10p		1k		45.3k		0.75V	3.25V	0V	32V			
DI02	1n	10p		1k		45.3k		0.75V	3.25V	0V	32V			
DI03	100p				10K	45.3k		0.75V	3.25V	0V	32V			
DI04	100p				10K	45.3k		0.75V	3.25V	0V	32V			
DI05	100p			1K		45.3k		0.75V	3.25V	0V	32V			
DI06	100p	-		1K		45.3k		0.75V	3.25V	0V	32V			

Copyright ECOTRON CORPORATION

DI07	100p	-	 1K	-	45.3k	 0.75V	3.25V	0V	32V	
DI08	100p		 1K		45.3k	 0.75V	3.25V	0V	32V	

Note: DI port configuration can be adjusted according to customer needs, above is only for reference.

2.2.3 Frequency Signal Input

Description

The frequency input channel circuit has the same structure, including EMC capacitors, pull-up/pull-down resistors, voltage divider resistors and a first-order low-pass filter.

Main difference:

- Resistance of pull-up/pull-down resistor
- Selection of pull up/down resistor

Schematic

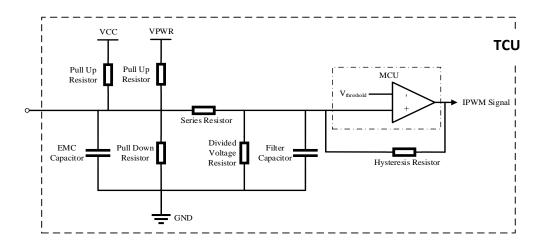


Figure 7 Schematic Diagram of Digital Frequency Input Channel

Table 2.2.3.1 Frequency Signal Input Channel Parameters

Note: 1) "--" = Unassembled

Pi	# Descript	EMC Cap	Filter Cap	Pull Up Resistor to UB	Pull Up Resistor to 5V	Pull Down Resistor	Serial Resistor	Divided Voltage Resistor	Hysteresis Resistor	Operation T for Input		Input :	Range
		(F)	(F)	(Ohm)	(Ohm)	(Ohm)	(Ohm)	(Ohm)	(Ohm)	Vlow	Vhigh	min	max

ET22377A02 Datasheet_V1.0

36	SPEED1	100p	 	1K	 55.3K	91K	0.931V	3.09V	0 V	5V
37	SPEED1	100p	 	1K	 55.3K	91K	0.931V	3.09V	0 V	5V
38	SPEED1	100p	 	1K	 55.3K	91K	0.931V	3.09V	0 V	5V
39	SPEED4	100p	 	1K	 55.3K	91K	0.931V	3.09V	0 V	5V

Table 2.2.3.2 Frequencies of Frequency Signal Input Channel and Duty Cycle Reference Values

	Input Duty Cycle (%) /	Detection	Detection
	Input Frequency	Frequency	Duty Cycle
			(%)
IPMW1-DI29_36	40%/1Hz	1Hz	39.939%
IPMW2-DI30_37	40%/1Hz	1Hz	39.939%
IPMW3-DI31_38	40%/1Hz	1Hz	39.939%
IPMW4-DI32_39	40%/1Hz	1Hz	39.939%

	Input Duty Cycle (%) /	Detection	Detection
	Input Frequency	Frequency	Duty Cycle
			(%)
IPMW1-DI29_36	50%/100Hz	100Hz	49.989%
IPMW2-DI30_37	50%/100Hz	100Hz	49.989%
IPMW3-DI31_38	50%/100Hz	100Hz	49.989%
IPMW4-DI32_39	50%/100Hz	100Hz	49.989%

	Input Duty Cycle (%) /	Detection	Detection
	Input Frequency	Frequency	Duty Cycle
			(%)
IPMW1-DI29_36	50%/30KHz	29940Hz	48.6%
IPMW2-DI30_37	50%/30KHz	29940Hz	48.6%
IPMW3-DI31_38	50%/30KHz	29940Hz	48.6%
IPMW4-DI32_39	50%/30KHz	29940Hz	48.6%

2.2.4 High-side Driver

Description

The high-side driver can be used as a switch for controlling peripheral devices through GPIO pins and perform the diagnostic functions through DEN and DSEL pins.

Main differences:

- Driving current
- With or without PWM function
- Drain current
- With or without freewheeling diode

Schematic

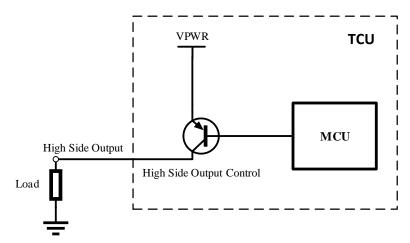


Figure 8 Schematic Diagram of High-Side Drive Channel

Table 2.2.4.1 High-Side Driver Channel Parameters

Pin#	Description	EMC Capacitor	Output current	Leakage Current	Free Wheeling Diode	Conditions / Remarks
1111 "	Description		Max(A)	Max(uA)		
62 81	HS01	10nF/50V	10	0.5	Yes	
24 43	HS02	10nF/50V	10	0.5	Yes	
23	HS03	10nF/50V	2	0.5	Yes	
22	HS04	10nF/50V	2	0.5	Yes	
60	HS05	10nF/50V	2	0.5	Yes	
61	61 HS06 10nF/50V 2		0.5	Yes		

Note:

- 1) "--" = Unassembled
- 2) The total load of all high-side drive channels cannot exceed 5A.

Copyright ECOTRON CORPORATION

All Rights Reserved

Fault Diagnosis of High-Side Driver

Table 2.2.4.2 High-Side Driver Fault Diagnosis

High-Side Driver Channel	Diagnosis Fault			
	Disable	Enable		
HSO01、HSO02、HSO03、HSO04	•Short to Power	•Short to Ground		
HSO05、HSO06	Short to rower			

Note: All the high-side driver channels have short-circuited protection. When the channel is enabled, if a channel is short to ground, then the channel will automatically activate the short-circuit protection function. This function may cause the channel to have a fault code jump phenomenon in this case, which is normal.

2.2.5 CAN Bus

Description

CAN interface circuit is used for communication between TCU and other vehicle electronic controllers. The maximum communication speed is 1Mbit/s. All channels support CAN flashing.

Schematic

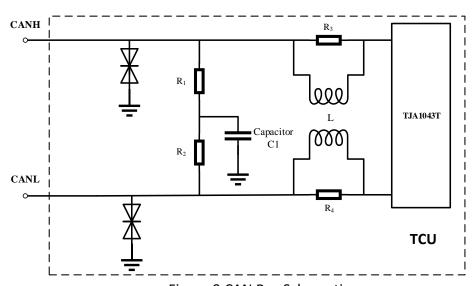


Figure 9 CAN Bus Schematic

Table 2.2.5.1 CAN Bus Parameters

Pin#	Description	Capacitor C1	R1, R2 (Ohm)	Choke L	Conditions / Remarks	
82	S_CAN_H		60		Support CAN2.0A/B, Support CAN	
83	S_CAN_L	100nF/100V	60	Yes	arbitrary frame wake-up, support CAN flashing	
6 85	P_CAN_H	100nF/100V	60	Yes	Support CAN2.0A/B, support CAN	
7 86	P_CAN_L	100117 1000	60	163	flashing	
88	D_CAN_H	100nF/100V	0	Yes	Support CAN2.0A/B, support CAN	
89	D_CAN_L	100117/1007	60	163	flashing	

2.2.6 5V Output

Description

The 5V voltage output channel can provide 5V power supply voltage for external sensors with following functions:

- Accurate 5V output for internal IC power supply
- 4 channels of 5V sensor power supply output
- Inverse polarity protection, short circuit protection, over temperature protection

Table 2.2.6.1 5V Sensor Power Output Parameters

Pin#	Description	ription Imax(mA)	
25	5V Supply Voltage 1	Sum of 2 channels	Single
46	3v Supply voltage 1	maximum 150mA	output 5V ± 1%
26	EV Supply Voltage 2	Sum of 2 channels	Single
47	5V Supply Voltage 2	maximum 150mA	output 5V ± 1%

2.2.7 H-bridge

Description

The H-bridge is a DC motor control driver that can reverse the voltage/current at load side or output side. All the channels have fault diagnosis function.

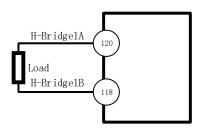


Figure 10 H-bridge working schematic

Note:

- 1) "--" = Unassembled
- 2) The total load of all H -bridge channels cannot exceed 40 A.
- 3) The maximum temperature for ET22377A02 in room temperature is 42 °C, when outputting 4A current.
- 4) Please use the signal generator to define the frequency accuracy, high frequency, or low frequency.

Continuous Current MAX Current Output Frequency

H1

10A

20A@10S

H2

Continuous Current MAX Current Output Frequency

Low frequency:
2Hz-1KHz

High frequency:
1KHz-20KHz

Table 2.2.7.1 H-Bridge Output Parameters

Fault Diagnosis of H-bridge DC Motor Control Circuit

The H-bridge driver diagnosis can directly provide feedback of the voltage value. Users can make further specific analyses through the collected voltage value to obtain the fault information of the H bridge.

The H-bridge power supply voltage acquisition ports correspond to the analog channels BATT MOTOR (AI09).

The conversion formula of H-bridge voltage acquisition into current:

When there is no current on the H-bridge, the measured bias voltage V0 at ISO \approx 1.246V. The magnification of the amplifier is 30.9, so the voltage at ISO, V_{ISO} = (0.002 Ω *I*30.9) +V0 $_{\circ}$ That is, I \approx (VISO-V0) *16.18. Since the maximum chip overcurrent alarm threshold is V_{ISO} =4.99V, at this time, I current= (V_{ISO} – V_{0})*16.18 \approx 60A, so the maximum current that

triggers the overcurrent alarm is 60A. The minimum threshold of the chip overcurrent alarm is V_{ISO} =4.5V, at this time, I current= $(V_{ISO}-V_0)$ *16.18 \approx 52A, so the minimum current that

Copyright ECOTRON CORPORATION

All Rights Reserved

triggers the overcurrent alarm is 52A.

Diagnosis of H-bridge output pin status

1. ENA=0. The H-bridge MOSFETs are all off. The voltages of AN28 and AN29 are the voltages divided by VCC. The maximum value is the voltage drop by ignoring the diode connected in series. All voltages are divided among the resistors. The voltage between VCC and AD reference voltage is + 0.2% error, voltage divider resistance +1% error, series resistance -1% error, the calculated maximum value of AN28 is 5*1.002*(16*1.01/

(16*0.99+16*0.99+16*0.99+16*1.01)=1.268V

The minimum value of AN28 takes the voltage drop of the series diode as 0.46V, the difference between the VCC voltage and the AD reference voltage is -0.2%, the voltage divider resistance is -1% error, and the series resistance is +1% error. The calculated minimum value of AN28 is (5*0.998-0.46)*(16*0.99/(16*0.99+16*1.01+16*1.01+16*1.01)=1.15V

When H bridge connects to a load, since the load resistance Rx of the motor is much less than 16K, ignoring the influence of the load, AN29 \approx AN28= (5-0.46)*((16*3)//(16*3)/((16* 3)// (16*3) +16))/3=0.9V. Take the threshold 0.6V<AN28 \approx AN29<1V.

When the H bridge load pin is short to ground, AN29 \approx AN28=0V, and the threshold value AN29 \approx AN28<0.3V

When the H bridge load pin is short to the power, AN29 \approx AN28=BATT*16/ (16+16+16), when BATT=12V, AN29 \approx AN28=4V. Considering that the lowest BATT is 8V, take the threshold AN29 \approx AN28>2.6V

When the H bridge load pin is shorted to 5V, AN29 \approx AN28=5*16/ (16+16+16)=1.67V. Take the threshold 1.4<AN29 \approx AN28<1.8V

When the H bridge is not connected to the load, AN28 is about 1.1V, and AN19 is about 0V. The threshold of AN28 is 0.9-1.3V; AN29<0.3V

A short-circuit fault occurs when the H bridge is not connected to the load. When 0.9<AN28<1.3V, H1_A is open. When 1.4<AN28<1.8V, the H bridge is short-circuited to 5V. When AN28>2.6V, the H bridge is short to BATT. When AN28<0.3 V, H bridge is short to ground (AN29≈AN28 in this status, but cannot confirm whether the load is connected or not. At this time, it can only report a short to ground error). When 1.4<AN29<1.8V, H1_B is short to 5V. When AN29>2.6V, H bridge is short to BATT. When AN29<0.3V, it cannot confirm whether the H1_B is open or shorted to ground.

Table 2.2.7.2 H-Bridge Test Frequencies and Duty Cycle Accuracy Reference Values

١	Direction	Input	Test	Input Duty	Test Duty	Input Duty	Test Duty	Input Duty	Test Duty
L	Direction	Frequency	Frequency	Cycle	Cycle	Cycle	Cycle	Cycle	Cycle
	A->B	100hz	100hz	10.0%	10.4%	50.0%	50.4%	90.0%	90.4%

ET22377A02 Datasheet_V1.0

Forward	1000Hz	1000Hz	10.0%	10.0%	50.0%	50.0%	90.0%	90.0%
Current	2000Hz	2000Hz	10.0%	9.7%	50.0%	50.0%	90.0%	90.3%
B->A	100hz	100hz	10.0%	9.91%	50.0%	49.95%	90.0%	89.90%
Reverse	1000Hz	1000Hz	10.0%	10.0%	50.0%	49.60%	90.0%	89.52%
Current	2000Hz	2000Hz	10.0%	9.7%	50.0%	50.0%	90.0%	90.3%

2.2.8 EEPROM

The EEPROM uses CAV25512YE-GT3 chip. It communicates with MCU through SPI and supports maximum rate of 10Mhz.

3. Technical Performance

3.1 Electrical Characteristics

Item	Design Specifications		
Operating Voltage	Dc 12 V / 24v (9~32v)		
Operating Temperature	-40 °C ~85 °C		
Working Humidity	0~95%, No Condensation		
Storage Temperature	-40 °C ~85 °C		
Quiescent Current	<1mA		
Rated Power Consumption	3 W (Not Including Load)		
Protection Level	IP67		
Weight	≤ 700g		
Controller Size	207×148×41mm		
Material	Die-Cast Aluminum		
	Equipped With Waterproof		
Housing	Breathable Valve, Good Heat		
	Dissipation		

3.2 Electrical Performance Standard

Item	Test Standard
Overvoltage (High Temperature)	ISO 16750-2
Jump Voltage	ISO 16750-2
AC Voltage Superposition Test	ISO 16750-2
Slow Drop and Rise of Supply Voltage	ISO 16750-2
The Supply Voltage Drops Instantaneously	ISO 16750-2
Reset Performance to Voltage Dip	ISO 16750-2
Starting Characteristics	ISO 16750-2
Reverse Voltage	ISO 16750-2
Reference Ground and Power Supply Offset	ISO 16750-2
Open Circuit Experiment -Single Wire Open Circuit	ISO 16750-2
Open Circuit Experiment -Multi-Line Open Circuit	ISO 16750-2
Short Circuit Protection	ISO 16750-2
Withstand Voltage	ISO 16750-2
Insulation Resistance	ISO 16750-2

3.3 Environmental Standards

Test Item	Test Standard
Waterproof (IP67)	IEC/EN 60529
Dustproof (IP67)	ISO 20653
Salt Spray Leakage Function and Corrosion Test	ISO 16750-4
Mechanical Shock Test	ISO 16750-3
Vibration Test	ISO 16750-3
Drop Test	ISO 16750-3
Temperature Shock	ISO 16750-4
Electrical Operation at Circulating Ambient Temperature	ISO 16750-4
High and Low Temperature Operation Experiment	ISO 16750-4
High and Low Temperature Experiment	ISO 16750-4
Temperature and Humidity Cycle	ISO 16750-4
Constant Temperature and Humidity	ISO 16750-4

3.4 EMC Test Standard

Test Item	Test Standard
Narrow Band Measurement Test	ECE-R10
Wide Band Measurement Test	ECE-R10
Conducted Emission Test	ECE-R10
Electromagnetic Radiation Immunity Test	ECE-R10
Transient Immunity Test	ECE-R10
Electrostatic Discharge Test	ECE-R10

3.5 Al diagnosis

5V Diagnosis	Voltage Acquisition
Overvoltage Range	>2.7V
Undervoltage Range	<2.2V
Short to Power Supply	>4.5V
Short to Ground	<0.5V

3.3V Diagnosis	Voltage Acquisition
Overvoltage Range	>1.9V
Undervoltage Range	<1.4V
Short to Power Supply	>2.3V
Short to Ground	<0.5V

4. Installation Requirements

It is recommended to install the TCU in the cockpit. If the OEM wants to assemble the TCU in another location, the corresponding installation location should be evaluated by Ecotron's engineers and the OEM's engineers.

The precautions for TCU installation are as follows:

- 1. The installation of TCU and wiring harness should be firm and reliable, and there should be no looseness. Avoid supporting the wiring harness by TCU. At the same time, the arrangement of TCU wiring harness should prevent and protect all wires in the wiring harness from damage due to wear and overheating.
- 2. Try to avoid installing in places where dust is easy to gather, a large amount of dust accumulation will affect the reliability of TCU work.
- 3. TCU should keep away from the location where the temperature of the shell itself may exceed 85°C. At the same time, it is necessary to prevent the surrounding parts from releasing heat to the TCU.
- 4. Avoid installing the TCU in locations where oil, moisture, and water droplets are likely to splash on it.
- 5. Avoid the possibility of additional mechanical shock and external impact due to the installation position and fixing method of the TCU and avoid installing the TCU at the resonance point of the car body.
- 6. Avoid installing the TCU where it may come into contact with the battery or other parts that are prone to seepage of acid and alkaline solutions, and near the TCU power terminal.
- 7. TCU should be installed in the horizontal and vertical position according to the connector downwards and maintain a certain angle to prevent water from entering the connector. In the horizontal direction, the recommended installation angle is -170° to -10°, as shown in Figure 10 below. In the vertical direction, the recommended installation angle is -170° -10°, as shown in Figure 11 below.


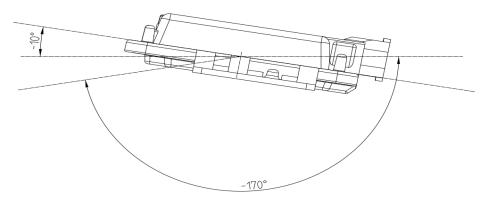


Figure 11 Horizontal Installation Angle

Copyright ECOTRON CORPORATION

All Rights Reserved

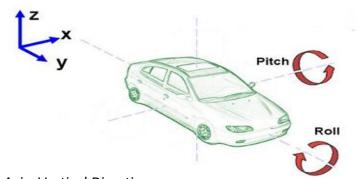

Z Axis: Vertical Direction
X Y Axes: Horizontal Direction

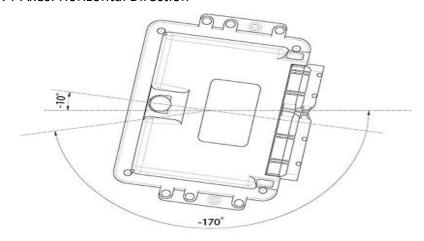


Figure 12 Vertical Installation Angle

Ecotron recommends using the six installation points on the TCU for installation and fixation. It is recommended to use metal materials such as aluminum alloy for the mounting bracket, and the housing should have a reliable electrical connection with the vehicle body through the bracket. If other materials are used, the customer must ensure that it can meet the requirements of TCU for vibration, heat dissipation, temperature, EMC, etc. If there is any deviation, it needs to be confirmed with Ecotron.

The TCU system adopts Ground through the vehicle's body. The specific requirement is to directly connect the ground wire in the wiring harness to the vehicle's body and ensure reliable electrical connection.